



## INSTALL TERMINAL TO CONNECTOR

Install the wire with the color shown in the manual into the indicated pin number of the connector.

When the wire color is GR or BR, and another wire color is also indicated in brackets, install the GR or BR wire in the pin location indicated by the pin number printed on the wire near the terminal.

## ABBREVIATIONS

The following abbreviations are used in this manual.

ABS	= Anti-Lock Brake System
A/C	= Air Conditioning
A/T	= Automatic Transaxle
COMB.	= Combination
C/P	= Coupe Type
ECU	= Electronic Control Unit
EFI	= Electronic Fuel Injection
EGR	= Exhaust Gas Recirculation
FL	= Fusible Link
IC	= Integrated Circuit
I/A	= Integrated Ignition Assembly
ISC	= Idle Speed Control
J/B	= Junction Block
L/B	= Liftback Type
LH	= Left-Hand
M/T	= Manual Transaxle
O/D	= Overdrive
R/B	= Relay Block
RH	= Right-Hand
SRS	= Supplemental Restraint System
SW	= Switch
TEMP.	= Temperature
VSV	= Vacuum Switching Valve
W/	= With
W/O	= Without

\* The titles given inside the components are the names of the terminals (terminal code) and are not treated as being abbreviations.